

SHIMANO ST@PS

Shimano Total Electric Power System

User's manual

E6000 Series



CONTENTS

IMPORTANT NOTICE	5
Important safety information	5
important safety information	
To ensure safety	5
Features of SHIMANO STePS	8
Features	8
Riding the bicycle	8
Assist mode	8
Names of parts	9
Specifications	9
Method of use	10
Charging the battery	10
Battery level indicator	11
Handling and charging the battery	11
Installing / removing the battery	12
Turning the power ON / OFF	13
Switching modes	13
Installing and removing the cycle computer	14
Changing settings	15
Operating the cycle computer	15
SHIMANO STePS logo screen	15
Basic screen display	16
Launching and exiting the setting menu	19
Changing the settings	20

Connection and communication with the PC	24
Downloading application	
Troubleshooting	25
Battery level lamp and error indication	25
Error messages on the cycle computer	26
Troubleshooting	27



User's manuals in other languages are available at :

http://si.shimano.com

IMPORTANT NOTICE

- Contact the place of purchase or a bicycle dealer for information on installation and adjustment of the products which are not found in the user's manual. A dealer's manual for professional and experienced bicycle mechanics is available on our website (http://si.shimano. com).
- Do not disassemble or alter this product.

For safety, be sure to read this user's manual thoroughly before use, and follow them for correct use.

Important safety information

Guidelines that require replacement, contact the place of purchase or a bicycle dealer.

 
Be sure to observe the following in order to avoid burns or other injury from fluid leakages, overheating, fire or explosions.

To ensure safety



Handling the battery

- Do not deform, modify, disassemble or apply solder directly to the battery. Doing so may cause leakage, overheating, bursting, or ignition of the battery.
- Do not leave the battery near sources of heat such as heaters. Do not heat the battery or throw it into a fire.
 Doing so may cause bursting or ignition of the battery.
- Do not subject the battery to strong shocks or throw it. If this is not observed, overheating, bursting, or fire may occur.
- Do not place the battery into fresh water or sea water, and do not allow the battery terminals to get wet. Doing so may cause overheating, bursting, or ignition of the battery.
- Use the specified charger and observe the specified charging conditions when charging the battery. Not doing so may cause overheating, bursting, or ignition of the battery.



To ensure safe riding

- Do not give too much of your attention to the cycle computer display while riding, otherwise accidents may result.
- Check that the wheels are securely installed to the bicycle before commencing riding. If the wheels are not securely installed, the bicycle may fall over and serious injury may result.
- If riding a power-assisted bicycle, make sure that you are fully familiar with the starting-off characteristics of the bicycle before riding it on roads with several vehicle lanes and pedestrian footpaths. If the bicycle starts off suddenly, accidents may result.
- . Check that the bicycle lights illuminate before riding at night.

Using the product safely

- Always be sure to remove the battery before carrying out any wiring and assembly work for the bicycle, otherwise electric shocks may result.
- When installing this product, be sure to follow the instructions given in the user's manual. Furthermore, it is recommended that you use only genuine Shimano parts at these times. If bolts and nuts are left loosened or the product is damaged, the bicycle may suddenly fall over and serious injury may result.
- After reading the user's manual carefully, keep it in a safe place for later reference.

Handling the battery

- If any liquid leaking from the battery gets into your eyes, immediately wash the affected area thoroughly with clean water such as tap water without rubbing your eyes, and seek medical advice immediately. If this is not done, the battery liquid may damage your eyes.
- Do not recharge the battery in places with high humidity or outdoors. Doing so may result in electric shock.
- Do not insert or remove the plug while it is wet. If this is not observed, electric shocks may result. If there is water leaking out of the plug, dry it thoroughly before inserting it.
- If the battery does not become fully charged after 6 hours of charging, immediately unplug the battery from the outlet to stop charging, and contact the place of purchase. Doing so may cause overheating, bursting, or ignition of the battery.
- Do not use the battery if it has any noticeable scratches or other external damage. Doing so may cause bursting, overheating or problems with operation.
- The operating temperature ranges for the battery are given below. Do not use the battery in temperatures outside these ranges. If the battery is used or stored in temperatures outside these ranges, fire, injury or problems with operation may occur.
 - 1. During discharge: -10 °C 50 °C
 - 2. During charging: 0 °C 40 °C

Cleaning

 The frequency of maintenance will vary depending on the riding conditions. Periodically clean the chain using an appropriate chain cleaner. Do not use alkaline or acidic cleaning agents for removing rust under any circumstances. If such cleaning agents are used, they may damage the chain and serious injury may result.



To ensure safe riding

 Observe the instructions in the user's manual for the bicycle, in order to ride safely.

Using the product safely

- Examine the battery charger regularly for damage, especially the cord, plug and enclosure. If the battery charger is damaged, it must not be used until it has been repaired.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not allow children to play near the product.

Handling the battery

- Do not leave the battery in a place exposed to direct sunlight, inside a vehicle on a hot day, or other hot places. This may result in battery leakage.
- If any leaked fluid gets on your skin or clothes, wash it off immediately with clean water. The leaked fluid may damage your skin.
- Store the battery in a safe place out of the reach of infants and pets.

Cleaning

- If any malfunctions or other problems occur, contact the place of purchase.
- Never attempt to modify the system yourself, as it may cause problems with system operation.



Using the product safely

- Be sure to install caps to any connectors which are not being used.
- For installation and adjustment of the product, consult a dealer.
- The Product is designed to be fully waterproof to withstand wet weather riding conditions. However, do not deliberately place them into water.
- Do not clean the bicycle in a high-pressure wash. If water gets into any of the components, operating problems or rusting may result.
- Handle the product carefully, and avoid subjecting it to any strong shocks.
- Although the bicycle still functions as a normal bicycle even when the battery is removed, the light does not turn on if it is connected to the electric power system. Be aware that using the bicycle under these conditions will be considered non-observance of the road traffic laws in Germany.

Handling the battery

Disposal information for countries outside the European Union



This symbol is only valid within the European Union. Follow local regulations when disposing of used batteries. If you are not sure, consult the place of purchase or a bicycle dealer.

Cleaning

- The number found on the battery key is necessary when purchasing spare keys. Keep it in a safe place.
- Contact the place of purchase for updates of the product software. The most up-to-date information is available on the Shimano website. For details, refer to the "Connection and communication with the PC" section.
- Do not use thinner or other solvents to clean any of the products. As such substances may damage the surfaces.
- You should periodically wash the chainrings in a neutral detergent. In addition, cleaning the chain with neutral detergent and lubricating it can be an effective way of extending the useful life of the chainrings and the chain.
- Use a damp cloth, with the water well wrung out, when cleaning the battery and plastic cover.
- For any questions regarding handling and maintenance, contact the place of purchase.
- Products are not guaranteed against natural wear and deterioration from normal use and aging.
- For maximum performance we highly recommend Shimano lubricants and maintenance products.

Assist

- If the settings are not correct, for instance if the chain tension is too tight, the proper assist force may not be obtained. If this happens, contact the place of purchase.
- Do not disassemble the product. Disassembling it may cause injury to persons.

Label

 Some of the important information contained in this user's manual is also indicated on the battery charger label

Features of SHIMANO STePS

Features

- Lightweight, compact design
- Silent, smooth ride
- . High shifting performance system (In the case of electronic gear shifting)

This system enables you to shift gears by providing the most appropriate level of power assistance carefully adjusted by a computer control based on accurate sensing.

■ Riding the bicycle

- 1. Turn on the power.
- 2. Select your preferred assist mode.
- 3. Assistance will start when the pedals start turning.
- 4. Change the assist mode in accordance with the riding conditions.
- 5. Turn the power off when parking the bicycle.

Assist mode

You can select a SHIMANO STePS assist mode for each particular application.


HIGH	NORMAL	ECO
Use when powerful assistance is required, such as when riding up steep uphill slopes.	Use when an intermediate level of assistance is needed, such as when you want to enjoy riding comfortably on a gentle slope or level ground.	Use when you want to enjoy long distance riding on level ground. When pedaling is not very strong, the amount of assistance is reduced and energy consumption is lessened.


When the battery level is running low, the level of assistance is lowered to increase the traveling range.

OFF

This mode does not provide power assistance when the power is turned on. Since there is no power consumption associated with the power assistance, it is useful for reducing battery consumption when the battery is running low.

Names of parts

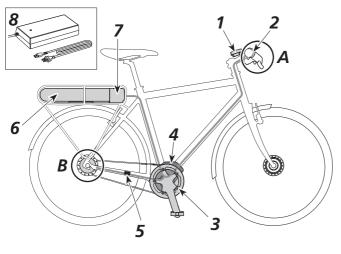

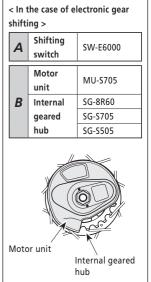

1	Cycle computer	SC-E6000	5	Speed sensor	
2	Assist switch	SW-E6000	6	Battery	BT-E6000
3	Front chainwheel	FC-E6000	7	Battery mount	SM-BME60
4	Drive unit	DU-E6000	8	Battery charger	SM-BCE60

Specifications

Operating temperature range: During discharge	-10 – 50°C	Rated capacity	11.6 Ah
Operating temperature range: During charging	0 – 40°C	Rated voltage	36 V DC
Storage temperature	-20 – 70°C	Drive unit type	Midship
Storage temperature (Battery)	-20 – 60°C	Motor type	Brush-less DC
Charging voltage	100 – 240 V AC	Rated drive unit power	250 W
Charging time	About 4 hours	Maximum drive unit power	500 W
Battery type	Lithium ion battery		

Method of use

■ Charging the battery

 Insert the plug of the battery charger into the socket of the battery.

Insert it with the groove side of the connector facing up.

* You cannot insert it with the groove side facing down.



DANGER

 Use the specified charger and observe the specified charging conditions when charging the battery. Not doing so may cause overheating, bursting, or ignition of the battery.





- You cannot use the battery immediately after purchase. Before riding, be sure to charge the battery until it is fully charged.
- If the bicycle is stored for an extended period of time immediately after purchase, you will need to charge the battery before using the bicycle. Once the battery is charged, it starts to deteriorate.



battery level lamp located on the battery.

O Lights up	Charging (Within 1 hour after the completion of charging)
 Flashing	Charging error
• Turned off	Battery disconnected (1 hour or more after the completion of charging)

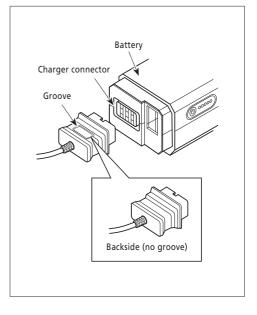

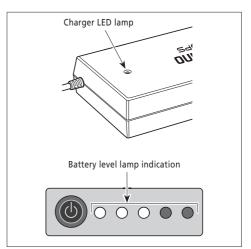

■ Battery level indicator

Charging-in-progress indication

Battery charge display	Battery charge
※ • • •	0% - 20%
○ ※ ● ●	21% - 40%
○ ○ ※ ● ●	41% - 60%
○ ○ ○ 💥 •	61% - 80%
0000	81% - 99%
00000	100%

Battery level indication

Battery charge display	Battery charge
00000	100% - 81%
○ ○ ○ ○ ●	80% - 61%
○ ○ ○ ● ●	60% - 41%
$\circ \circ \bullet \bullet \bullet$	40% - 21%
$\circ \bullet \bullet \bullet \bullet$	20% - 1%
☆ • • •	0%
• • • •	Power off / Shutdown

■ Handling and charging the battery

Charging can be carried out at any time regardless of the amount of charge remaining, but you should fully charge the battery at the following times. Be sure to use the special charger when recharging the battery at these times.

- The battery is not fully charged at the time of purchase. Before riding, be sure to charge the battery until it is fully charged.
- If you will not use the bicycle for an extended period of time, charge the battery before storing the bicycle.

If the battery has become fully spent, charge it as soon as possible. If you leave the battery without charging it, it will cause the battery to deteriorate.

• If you will not ride the bicycle for an extended period of time, charge the battery periodically. Do not let the battery discharge completely.

■ Installing / removing the battery


How to use the key

The following description may not be applicable as different types of keys are available.

Insert the key into the key cylinder in the battery holder.



The position of the key does not affect the insertion of the battery. You can insert it regardless of the key position.

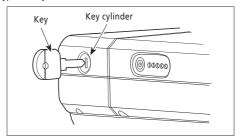


To unlock the battery turn the key until you feel some resistance.

CAUTION

To prevent the battery from dropping off, do not ride the bicycle with the key inserted.



You cannot remove the key when it is not in the inserting position.

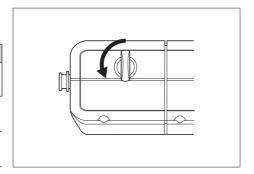


Removing the battery

Turn off the power, then turn the key to the unlocking position, and pull out the battery.



 You can remove the battery only when the key is in the unlocking position.




Installation of the battery

- Set the battery on the holder rail from behind and slide it forward.
 Push it in firmly.
- **2.** Return the key to the locking position, remove it, and store it in a safe place.



Check that the battery is locked before riding the bicycle.

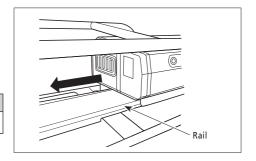

■ Turning the power ON / OFF

Press the power button once with the power turned ON or OFF. All the indicators turn on when the power is on.

CAUTION


When turning on the power, check that the battery is firmly attached to the holder.



When turning the power ON or OFF, do not place your foot on the pedal.


Automatic power off function

If the bicycle has not moved for over 10 minutes, the power will automatically turn off.

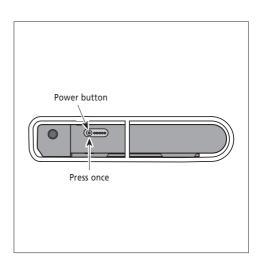

■ Switching modes


	Х	Changing the cycle computer display	
When switching assist modes: the level of assistance becomes stronger When shifting gears: pedaling becomes he		_	
When switching assist modes: the level of assistance becomes weaker When shifting gears: pedaling becomes light			

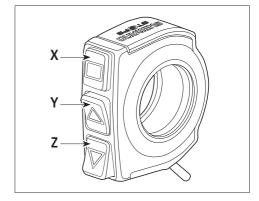

■ Installing and removing the cycle computer

Slide the cycle computer onto the bracket as shown in the illustration to install it.


Insert the cycle computer securely until it clicks into place.

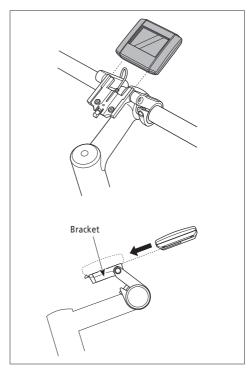

To remove the cycle computer, push the lever of the bracket firmly while sliding out the cycle computer.



If the cycle computer is not correctly in place, the assist function will not operate normally.

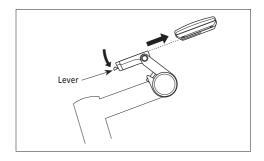


Changing settings

■ Operating the cycle computer

You can operate the display of the cycle computer by using the X, Y, and Z buttons on the right and left assist switches.



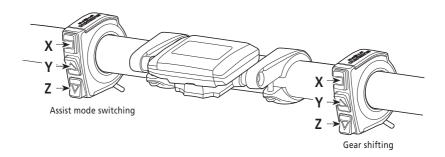

■ SHIMANO STePS logo screen

This screen is displayed when the system is started up.



■ Basic screen display

Displays the status of the power assisted bicycle, traveling data.



1. Current speed

Displays the current speed.

2. Current time

Shows the current time.

3. Battery charge

Displays the current battery level in six levels.

* The battery level is not displayed when the traveling data in **6** shows "RANGE".


4. Speed unit display


You can switch between km/h and mph.

Display	Battery indicator
(IIII)	81 - 100%
	61 - 80%
	41 - 60%
	21 - 40%
	1 - 20%
	0%

5. Changing the assist mode display

Press Assist-Y or Assist-Z on the assist switch to switch assist modes.

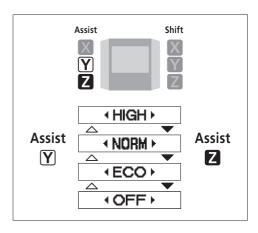

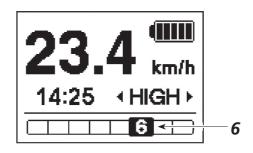


6. Gear position and traveling data display

Displays the current gear ratio or traveling data. The type of traveling data displayed changes each time you tap Assist-X.

Display	Details
6	Gear position (displayed only when the motor unit is connected)
4DST 109.7km≯	Traveling distance
40D0 11097km≯	Cumulative distance
∢RANGE 107km≯	Traveling range*1
RANGE HIGH 61 km NORM 77 km ECO 97 km	Traveling range (optional)*2
4TIME 143:29⊁	Traveling time (optional)*2
4AVG 16.8km/h >	Average speed (optional)*2
4MAX 16.8km/h ▶	Maximum speed (optional)*2

- *1 The battery level in **3** is not displayed when "RANGE" is displayed. The traveling range should be used as a reference only.
- *2 Optional item: You can configure the display settings in E-tube Project. For details, refer to the "Connection and communication with the PC" section.

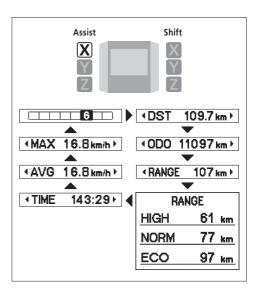


Turning the battery-powered light ON or OFF

When the battery-powered light is connected, pressing the Assist-X for 2 seconds displays this information instead of the clock and assist mode. The light turns on and off each time it is displayed. It is displayed for about 2 seconds.



The light turns on and off in conjunction with the battery power.


When the battery power is off, the light is off.

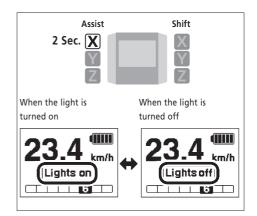

Clearing the traveling distance

When the light is not connected, you can clear the traveling distance in the main screen. If the battery-powered light is connected and configured, clear the traveling distance (DST) according to "Clear settings (Clear)" in "Changing the settings".

1. Change the traveling data display to DST and press the Assist-X for 2 seconds.

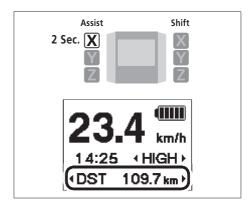

2. Release the finger when the DST indication starts blinking.

In this state, pressing the Assist-X again clears the traveling distance.




- The DST indicator light stops blinking and the screen takes you back to the basic screen after leaving it alone for 5 seconds.
- When the traveling distance is cleared, TIME, AVG, and MAX are also cleared.



■ Launching and exiting the setting menu

Launching


 With the bicycle stopped, pressing both the Assist-Y and Assist-Z at the same time for 2 seconds displays the setting screen.

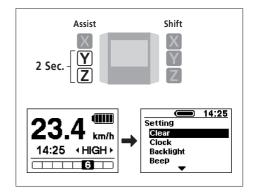

2. Press the Assist-Y or Assist-Z to move the cursor to the item you want to configure.

Pressing the Assist-X displays the setting screen for the item selected.

	Item	Details	
	Clear	Clear settings	<u> </u>
Î	Clock	Clock setting	
	Backlight	Backlight setting	
	Веер	Beep setting	
	Unit	Switching between km and miles	
	Language	Language setting	
	Adjust	Adjusting the power gear shifting unit	
	Exit	Return to the main screen	1

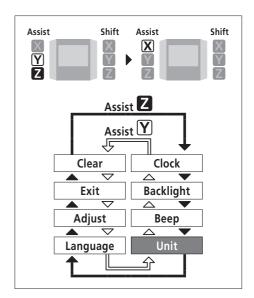

Exit setting (Exit)

- 1. Press the Assist-Y or Assist-Z to move the cursor to "Exit".
- **2.** Pressing the Assist-X exits the setting menu and takes you back to the basic screen.

■ Changing the settings

Clear settings (Clear)

Clear the traveling distance, or reset the display setting to default.

1. Press the Assist-Y or Assist-Z to move the cursor to the item you want to configure.

Item	Details	
Exit	Return to the setting menu screen	
DST	Clearing the traveling distance	
Default	Reset the SC display setting to default	


Default value set in the SC display setting

Item	Default value	
Backlight	ON	
Веер	ON	
Unit	km	
Language	English	

Pressing the Assist-X enables the set value at the cursor position and takes you back to the "Setting menu" screen.



When the traveling distance is cleared, TIME, AVG, and MAX are also cleared.

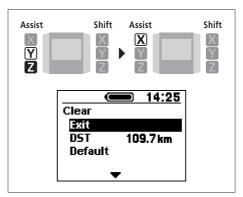


Clock setting (Clock)

Configure the clock setting.


1. Press the Assist-Y or Assist-Z to set the hour.




Press Assist-Y to increase the time value. Press Assist-Z to decrease the time value.

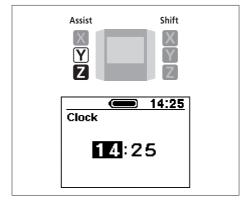

 2. Pressing the Assist-X enables the set value and moves you to the minutes setting.



 3. Press the Assist-Y or Assist-Z to set the minutes.



4. Pressing the Assist-X enables the set value and takes you back to the "Setting menu" screen.





You can change the numbers quickly by holding down the Assist-Y or Assist-Z.


Backlight setting (Backlight)


Configure the backlight setting.

1. Press the Assist-Y or Assist-Z to move the cursor to the item you want to configure.

Item	Details	
ON	Always turned on	
OFF Always turned off		
MANUAL	Turns on and off in conjunction with the battery-powered light	

 Pressing the Assist-X enables the set value at the cursor position and takes you back to the "Setting menu" screen.

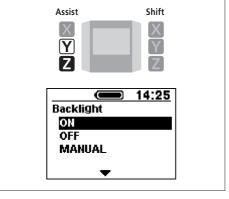




Beep setting (Beep)

Configure the beep setting.

1. Press the Assist-Y or Assist-Z to move the cursor to the item you want to configure.

Item	Details	
ON	Enable beeps by operation	
OFF	Disable beeps by operation	

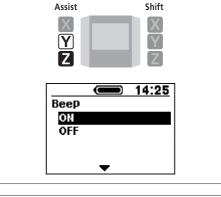

Pressing the Assist-X enables the set value at the cursor position and takes you back to the "Setting menu" screen.




Switching between km and miles (Unit)


Configure the distance unit setting.

1. Press the Assist-Y or Assist-Z to move the cursor to the item you want to configure.

Item	Details	
km	Displayed in km	
mile	Displayed in miles	

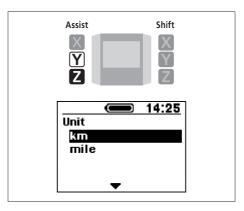

 Pressing the Assist-X enables the set value at the cursor position and takes you back to the "Setting menu" screen.




Language setting (Language)

Configure the language setting.

 Press the Assist-Y or Assist-Z to move the cursor to the item you want to configure.



Pressing the Assist-X enables the set value at the cursor position and takes you back to the "Setting menu" screen.

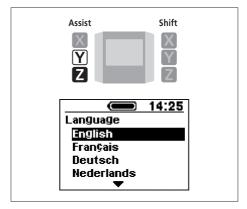



Adjusting the power gear shifting unit (Adjust)

You can adjust gear shifting only when a built-in electronic gear shifting unit is connected. If you need to adjust the derailleur, contact the place of purchase.

Connection and communication with the PC

■ Downloading application

You need E-tube Project to configure SHIMANO STePS and update firmware.

Download an E-tube Project from the support website (http://e-tubeproject.shimano.com). For information on how to install an E-tube Project, check the support website. For information on how to operate the PC, refer to the help manual on the E-tube Project.



- You need SM-PCE1 and SM-JC40 / JC41 to connect SHIMANO STePS to a PC.
- Firmware is subject to change without notice. If necessary, contact the place of purchase.

Troubleshooting

■ Battery level lamp and error indication

Error indication type	Indication condition	Lighting pattern *1	Recovery
System error	Communication error with the bicycle system	☆ • • • ○	Make sure that the cable is not loose or improperly connected. If the situation does not improve, contact the place of purchase.
Temperature protection	If the temperature exceeds the guaranteed operating range, the battery output is turned off.	※ • • ○ •	Leave the battery in a cool place away from direct sunlight until the internal temperature of the battery decreases sufficiently. If the situation does not improve, contact the place of purchase.
Security authentication error	This is displayed if a genuine drive unit is not connected. This is displayed if any of the cables are disconnected.	ÿ•○••	Connect a genuine battery and drive unit. Check the condition of the cables. If the situation does not improve, contact the place of purchase.
Charging error	This is displayed if an error occurs during charging.	∅ • • •	Remove the connector between the battery and charger, and press the power switch with only the battery connected. If an error appears with only the battery connected, contact the place of purchase.
Battery malfunction	Electrical failure inside the battery	* • • • *	Connect the charger to the battery and then remove the charger. Press the power switch with only the battery connected. If an error appears with only the battery connected, contact the place of purchase.


*1 lacksquare : No light \bigcirc : Lights up $\begin{subarray}{c} \begin{subarray}{c} \begin{subarray}{c}$

■ Error messages on the cycle computer

WARNING

This disappears if the error is fixed.

A message appears instead of the clock indication.

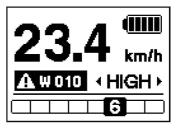

List of warnings

Code	Situation where the error occurred	Condition for removing the operational restriction when a warning is being displayed	Remedy
W010	The temperature of the drive unit is high.	The level of assistance may decrease.	Stop using the assist function until the temperature of the drive unit drops. If the situation does not improve, contact the place of purchase.
W011	The traveling speed cannot be detected.	The maximum speed up to which power assistance is provided may decrease. (Power assistance is provided up to 25 km/h in top gear.)	Check that the speed sensor is properly installed. If the situation does not improve, contact the place of purchase.
W030	Two or more assist switches are connected to the system.	Gear shifting is not available for power gear shifting derailleurs.	Change the assist switch to the gear shifting switch, or connect only one assist switch and turn on the power again. If the situation does not improve, contact the place of purchase.
-	A communication error between the drive unit and the motor unit was detected.	Gear shifting is not available for power gear shifting derailleurs.	Check that the cable is properly connected between the drive unit and the motor unit. If the situation does not improve, contact the place of purchase.

Error

If an error message is displayed on the entire screen, follow one of the procedures below to reset the display.

- Press the power switch of the battery.
- Remove the battery from the holder.



If resetting the battery power does not solve the problem or the same problem occurs frequently, contact the place of purchase.



List of errors

Code	Situation where the error occurred	Operational restriction when an error is being displayed	Remedy
E010	A system error was detected.	Power assistance is not provided during riding.	Turn on the power again. If the situation does not improve, contact the place of purchase.
E012	The initialization of the torque sensor failed.	Power assistance is not provided during riding.	Turn on the power again. If the situation does not improve, contact the place of purchase.
E020	A communication error between the battery and drive unit was detected.	Power assistance is not provided during riding.	Check that the cable between the drive unit and battery is properly connected. If the situation does not improve, contact the place of purchase.

■ Troubleshooting

Assist function

Symptom	Cause / Possibility	Remedy
	Is the battery sufficiently charged?	Check the battery charge. If the battery is nearly spent, recharge it.
	Are you riding on long slopes in summer weather or riding for a long time carrying a heavy load? The battery may be overheating.	Turn off the power, wait for a while and then check once more.
Assistance is not being provided.	The drive unit (DU-E6000), cycle computer (SC-E6000) or assist switch (SW-E6000) may be connected incorrectly or there may be a problem with one or more of them.	Contact the place of purchase.
	Is the speed too high?	Check the Cycle Computer display. Assistance is not provided at speeds of 25 km/h or more.

Assist function

Symptom	Cause / Possibility	Remedy
	Are you pedaling?	The bicycle is not a motorbike, so you need to operate the pedals.
Assistance is not being provided.	Is the assist mode set to OFF?	Set the assist mode to HIGH. If you still do not feel that assistance is being given, contact the place of purchase.
	Is the power for the cycle computer turned on?	Hold down the power switch to turn on the power. If you still do not feel that assistance is being given, contact the place of purchase.
	The traveling distance may become shorter depending on road conditions, the gear position and whether the light are ON or OFF.	Check the battery charge. If the battery is nearly spent, recharge it.
Assist traveling distance is	The battery characteristics will drop during winter weather.	This is not a sign of a problem.
CO STOTE.	The battery is a consumable part. Repeated recharging and long periods of use will cause the battery to deteriorate (lose its performance).	If the distance that can be traveled on a single charge is very short, replace the battery with a new one.
	Are the tires inflated to a sufficient pressure?	Use a pump to add air.
	Is the assist mode set to OFF?	Set the assist mode to HIGH. If you still do not feel that assistance is being given, contact the place of purchase.
Pedaling is stiff.	The battery may be running low.	After charging the battery well, check the level of assistance again. If you still do not feel that assistance is being given, contact the place of purchase.
	Did you turn on the power with your foot placed on the pedal?	Turn on the power again without putting pressure on the pedal. If you still do not feel that assistance is being given, contact the place of purchase.

Battery

Symptom	Cause / Possibility	Remedy
All the five battery level indicators stay on.	The battery level indicators do not show battery levels when the battery is connected to the bicycle. Battery levels are shown during charging.	It is not a sign of a malfunction.
The battery quickly loses its charge.	The battery may be at the end of its service life.	Replace the battery with a new one.

Battery

Symptom	Cause / Possibility	Remedy	
	Is the power plug of the charger securely inserted into the electrical outlet?	Disconnect and then reconnect the power plug of the charger, and then repeat the recharging operation. If the battery still cannot be recharged, contact the place of purchase.	
The battery cannot be recharged.	Is the recharging plug of the charger securely inserted into the battery?	Disconnect and then reconnect the recharging plug of the charger, and then repeat the recharging operation. If the battery still cannot be recharged, contact the place of purchase.	
	Are the connection terminals of the charger or the battery dirty?	Wipe the connection terminals with a dry cloth to clean them, and then repeat the recharging operation. If the battery still cannot be recharged, contact the place of purchase.	
The battery does not start recharging when the charger is connected. The battery may be at the end of its serv life.		Replace the battery with a new one.	
The battery and charger are becoming hot.	The temperature of the battery or charger may exceed the operating temperature range.	Stop recharging, wait for a while and then recharge again. If the battery is too hot to touch, it may indicate a problem with the battery. Contact the place of purchase.	
The charger is warm. If the charger is being used continuously to charge batteries, it may become warm.		Wait a while before using the charger again.	
	Is the recharging plug of the charger securely inserted into the battery?	Check the connection for any foreign objects before reinserting the charging connector. If there is no change, contact the place of purchase.	
The LED on the charger does not illuminate.	Is the battery fully charged?	If the battery is fully charged, the LED on the battery charger turns off, but this is not a malfunction. Disconnect and then reconnect the power plug of the charger, and then repeat the recharging operation. If the LED on the charger still does not illuminate, contact the place of purchase.	
The battery cannot be removed.		Contact the place of purchase.	
The battery cannot be inserted.		Contact the place of purchase.	
Fluid is coming out from the battery.		Contact the place of purchase.	
An abnormal odor can be detected.		Stop using the battery immediately and contact the place of purchase.	
Smoke is coming out from the battery.		Stop using the battery immediately and contact the place of purchase.	

Lights

Symptom	Cause / Possibility	Remedy	
The front light or the tail light does not illuminate even when the switch is pressed.	The E-tube Project settings may be wrong.	Contact the place of purchase.	

Cycle computer

Symptom	Cause / Possibility	Remedy	
	The amount of battery charge may be insufficient.	Recharge the battery, and then turn the power on once more.	
The cycle computer display does not appear even when the power switch is pressed.	Is the power turned on?	Hold down the power switch to turn on the power.	
	Is the cycle computer correctly installed to the bracket?	Install the cycle computer correctly while referring to "Installing and removing the cycle computer".	
	Is the electric wire connector correctly installed?	Check to see if the connector of the electric wire connecting the motor unit to drive unit is not disconnected. If you are not sure, contact the place of purchase.	
The gear position is not displayed.	The gear position is only displayed when the power gear shifting unit is installed.	Check if the electric wire connector is disconnected. If you are not sure, contact the place of purchase.	
Can the beep be turned off.		Change the setting. Refer to "Beep setting (Beep)".	
Can the backlight be turned off.		Change the setting. Refer to "Backlight setting (Backlight)".	
l launched while riding the		Stop the bicycle and then make the settings.	

Other

Symptom	Cause / Possibility	Remedy	
When pressing the switch, two beeps sound, and the switch cannot be operated.	Operation of the switch being pressed has been disabled.	It is not a sign of a malfunction.	
Three beeps sound.	An error or warning is occurring.	This occurs when a warning or error is displayed on the cycle computer. Refer to the section "Error messages on the cycle computer" and follow the instructions provided for the appropriate code.	
When using a electronic gear shifting mode, I feel that the level of assistance weakens when the gears shift.	This occurs because the level of assistance is being adjusted to the optimum level by the computer control.	It is not a sign of a malfunction.	
Sound occurs after gear shifting.		Contact the place of purchase.	
A noise can be heard from the rear wheel during normal riding. Gear shifting adjustment may not have been carried out correctly.		For mechanical gear shifting Adjust the cable tension. For details, refer to the Service Instructions for the derailleur. For powered gear shifting Contact the place of purchase.	

*	Κev	num	her

The number that is attached to the key is needed in case you need to purchase spare keys. Make a note of the in the following box and keep it in a safe place.



SHIMANO

SHIMANO AMERICAN CORPORATION

One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003

SHIMANO EUROPE B.V.

Industrieweg 24, 8071 CT Nunspeet, The Netherlands Phone: +31-341-272222

SHIMANO INC.

3-77 Oimatsu-cho, Sakai-ku, Sakai-shi, Osaka 590-8577, Japan

Please note: specifications are subject to change for improvement without notice. (English) © Nov. 2013 by Shimano Inc. HTR